

MULTI-ELITE CONTROLLER

(N-Switch/iOS/Android/PC)
Instruction Manual (v1.30)

Button Illustration

- L1/L2
- R1/R2
- SELECT
- START
- Left JOY-L
- ADJUST
- Downward L3
- Screenshot button
- Turbo
- Right joystick
- D-pad
- LED indicator
- HOME
- LED indicator

R2 Turbo Switch L2 Turbo Switch

SET RESET

Connect to Switch

① SWITCH terminal

Press HOME for 3 seconds to start pairing.

③ Controller

Press HOME for 3 seconds to start pairing.

④ Registration completed

Press HOME to return.

Connect to iPhone/iPad/Android/PC

Xinput Mode (Xbox Controller)

Press Home and A for 3 seconds to start pairing turned off.

③ Mobile terminal

In Bluetooth, select new Wireless Controller to pair.

After successful pair, LED 3 stay on.

Attention when using smartphone games

- Supported game: Xinput mode According to MFL only approved games can be supported. Should be. For example: Minecraft, Fortnite, Call of Duty, NBA 2K mobile, Genshin Impact APPL, Diablo and other games that are supported by the controllers can match. (Genshin Impact requires iOS 14 and above)
- This version will be released after 13/14, and the Android version will be released after 9/10 After windows, it can be supported. Try to update to the latest version.
- Vibration and gyroscope induction cannot be used when the mobile phone is in use.
- When you set up again, you can automatically connect to the last day by simply pressing the HOME button with the pairing.

Wired Connection to PC/Switch/Android

Press Turbo multiple times on the same button can cause different effects.
[See below figure for details, illustrated with L1]

Special Turbo Set up

D-pad up, down, left, and right(A)/B(X)/Y(L1)/L2/R1/R2 button

While searching, LED 3 flash.

For Switch: you need to turn on the wired connection on Switch.

Interchange X-Input and D-Input During Wired Connection to PC

Xinput mode Dinput mode

Press SELECT; and START/Hor 3-5 sec

To adjust the LED colours or turn them OFF:

- Check the controller is connected to the console
- Press the SET button advances the LED color cycle.
- After cycling all colours/red light setting sets the LEDs to OFF.
- Press SET together again to restart the LED as our cycle.

NOTE: The controller stores the LED mode when the console is powered off.

Setting method

Turn on Turbo T 1st	+ L1	Add Turbo function on L1
Turn on Continuous Turbo T 2nd	+ L1	Add Continuous Turbo function on L1
Turn off Turbo T 3rd	+ L1	Turn off Turbo function on L1
Clear all Turbo T	-	one second to clear all buttons with Turbo function

Set Up Turbo Frequency

Please note:

- Switch up twice to increase the frequency from 8 times/sec to 25 times/sec and vice versa.
- LED flashes for 3 seconds when the frequency is changed.
- Change in frequency will be saved even if power is turned off.

This controller has three levels of Turbo frequencies: 8/15/25 times/sec.

- Press turbo + switch left joystick up to increase the last led frequency from 15 times/sec to 25 times/sec.
- Press turbo + switch right joystick up to decrease the frequency from 25 times/sec to 8 times/sec.
- The default frequency is 15 times/sec.
- Press both T and - for one second to clear all turbo settings.

Product specifications

1. Size :115*70*65mm	2. Weight: 250g
3. Input voltage/current :DC5V / 500mA	4. Working voltage/current: DC3.7V / 80mA
5. Maximum operating current: 200mA	6. Continuous use time :8 hours
7. Charging time about 3 hours	8. Bluetooth wave range :6m
9. Battery capacity :1200mah	10. Waiting time: 30 days

Important to Know Before Use

- The name may not display properly when you start connecting to the phone, and the Bluetooth MAC code (44-55-54-00-00, etc.) may display, select that pair. If nothing is displayed, turn off bluetooth and try again. Sometimes you need to reboot your phone.)
- When connecting the Switch with a cable, the controller on the Switch side cannot be connected if the cable connection is invalid.
- When multiple models are supported, Bluetooth wave competition prevents the device from pairing, please turn off Bluetooth for the last pairing device.

WARNING

- Do not place the controller under direct sunlight
- Do not place the controller in water
- Do not put heavy stuff on the controller
- Avoid liquid or small particles
- Do not twist or pull the joysticks

Factory data reset

Use a needle to press the reset button in the hole on the back of the controller and turn off the controller to finish reset (make sure the controller is turned on while pressing the reset button in the hole)

Package content

x130 controller x1 Operating instruction x1 Type-C cable x1

[illegible][illegible]